


TURNTABLE OPERATION



WASHINGTON The DC logo, consisting of the letters "DC" in a bold, sans-serif font, enclosed within a white rounded rectangle.

TURNTABLE OPERATION

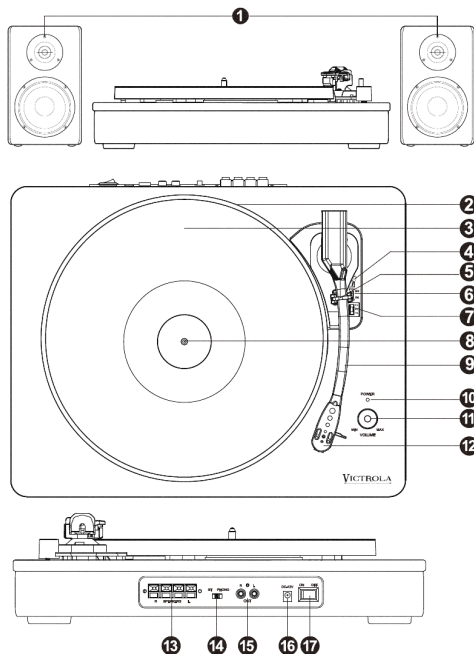

1. Speakers
2. Turntable Platter
3. Felt Mat
4. Lift Lever
5. Tone Arm Clip/Rest
6. Auto & Manual Stop Control Switch
7. Speed Control Selection Switch
8. Turntable Shaft
9. Tone Arm
10. Power/Function LED Indicator
11. Volume Control Knob
12. Stylus (Needle) Cartridge
13. External Speaker Jacks
14. Function Selection Switch
15. L/R RCA Output Jack
16. DC IN Power Jack
17. Power ON/OFF Switch

- ① Make sure that the power is on in the room (a key card must be placed inside the slot by the room entrance).
- ② Make sure the turntable cable is plugged in and the power switch on the back side of the turntable has to be flipped on.
- ③ A red light or blue light will appear automatically. There is a small switch on the back side of the turntable that changes from Phono (red light) or Bluetooth (blue light). The turntable must be set to Phono (red light) in order to play records.
- ④ Please place records back in sleeve and on the shelf when done.

NEED FURTHER ASSISTANCE? CONTACT THE FRONT DESK.

☎ +1 (202) 289-7600